

**S E R V I C E B U L L E T I N N O . 1 5 6****Door Handle for Visual Cooking Ovens**

To limit the number of variants of the door handle for Visual Cooking ovens, we have decided to omit the **door handle for Visual Cooking I** ovens from our range of products. Consequently, the following part numbers are no longer available:

Handle assy LH without lever 20420273 / 20420312  
Handle assy RH without lever 20420274 / 20420313  
Handle assy LH with lever 20420227  
Handle assy RH with lever 20420262  
Handle assy LH with straight lever 20420476 (BKI only)  
Handle assy RH with straight lever 20420477 (BKI only)

**They are replaced by Handle assy 30420013.**

**Please note, however, that on a right-hand hinged door, it will be necessary to adjust the catch, and on a left-hand hinged door it will be necessary to turn the catch 90° to the right and then adjust it in order that this handle may be used on existing ovens.**

Effective 1 November 2007.

Best regards

**HOUNÖ A/S**

Sales & Technical Support  
Customer Centre

Tlf. : +45 8711 4711  
Fax : +45 8711 4710  
e-mail : [kundecenter@houno.com](mailto:kundecenter@houno.com)  
Website : <http://www.houno.com>