

**SERVICE BULLETIN NO. 119****Error Codes 14 and 15**

**The following applies to oven models BPE, CPE and KPE:**

Error codes 14 and 15 also occur on oven models BPE, CPE and KPE. The fault can be remedied by proceeding as follows:

As it is, the frequency changer is directly connected to fuse F5. Disconnect the wire for the frequency changer and connect it to terminal 7 at main contactor K1. Then connect a wire from the output point of fuse F5 to terminal 8 at main contactor K1.

For further clarification, see the attached wiring diagrams.

Yours sincerely,

**HOUNÖ A/S**

Sales & Technical Support  
Customer Centre

Tel. : +45 8711 4711


Fax : +45 8711 4710

E-mail : [kundecenter@houno.com](mailto:kundecenter@houno.com)

Website : <http://www.houno.com>



### Former connection:

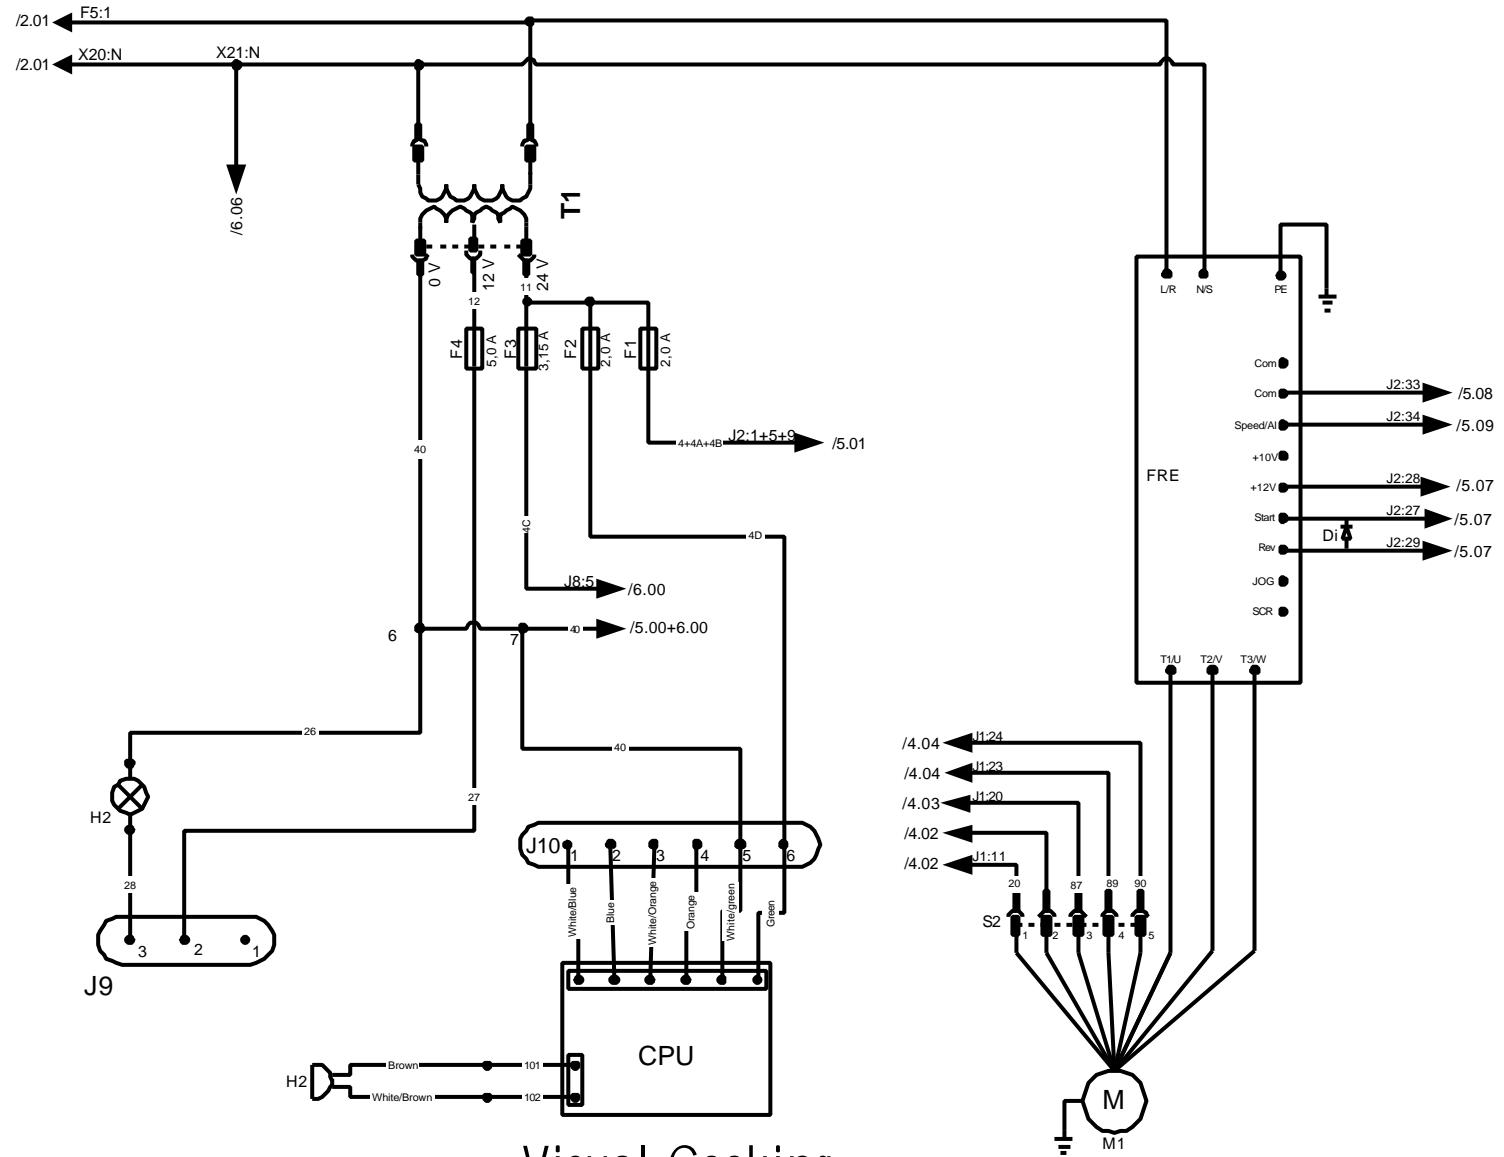

Visual Cooking

