

**SERVICE BULLETIN NO. 167****Handle for Visual Cooking I**

We have experienced that the handle for Visual Cooking I ovens may work loose after some time. One of the reasons for this is that the holes in which to fix the handle are oval. A centering plate (20400266) has now been made to solve the problem.



The edge of the centering plate should touch the door.

**Date of introduction: 1 November 2008.**

Best regards,

**HOUNÖ A/S**

Sales & Technical Support

Customer Centre

Tel. : +45 8711 4711

Fax : +45 8711 4710

E-mail : [kundecenter@houno.com](mailto:kundecenter@houno.com)

Website : <http://www.houno.com>